




MONITOR ARM

DESK CLAMP - DOUBLE - BLACK



KFI0417 - INSTRUCTION MANUAL

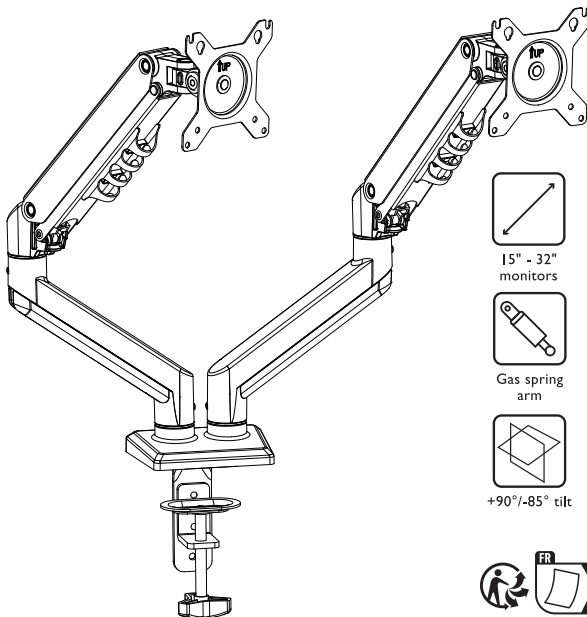

15" - 32"
monitors



Holds up to
9kg/arm



Max. 100mm
desk clamp



Gas spring
arm



Adjustable
folding



75x75cm
100x100cm



+90°/-85° tilt



180° swivel



360° rotate



ALL LANGUAGES:



- English
- Deutsch
- Français
- Nederlands
- Español
- Português
- Italiano
- Svensk
- Norsk
- Suomi
- Ελληνική
- Български
- Magyar
- Polski
- Česky
- Slovenská
- Slovenščina


WWW.Q-CONNECT.COM

WARNING STATEMENTS






Warning

-  Prior to the installation of this product, the installation instruction must be read and completely understood. Failure to do so may result in personal injury, property damage or voiding of factory warranty.
-  Do not install on a structure that is prone to vibration, movement or chance of impact. Reinforce the structure as required before installation.
-  The desk clamp can support a maximum thickness of 10 cm. Confirm the desk edge before installation.
-  Pay attention to the weight capacity of the mount. Exceeding the limitation can result in function unworkable or even serious personal injury and property damage.
-  Never operate the mount if parts are missing or damaged. Contact your local service center for warranty service.

PRODUCT LINE GRAPH

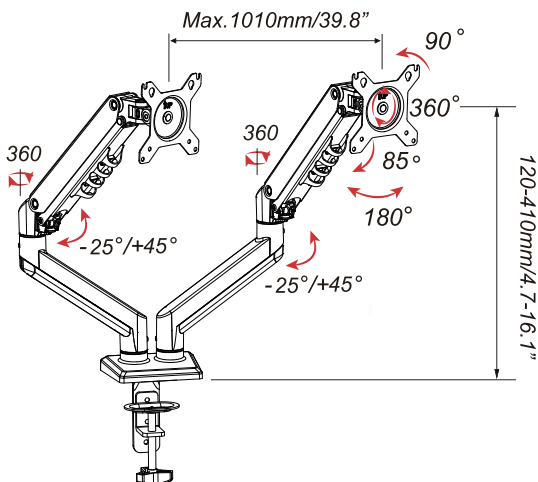


PARTS INCLUDED

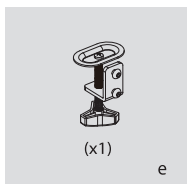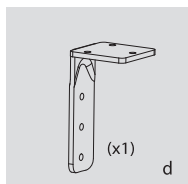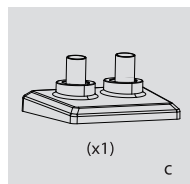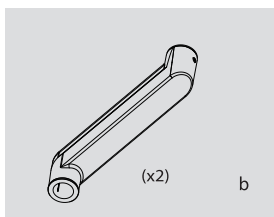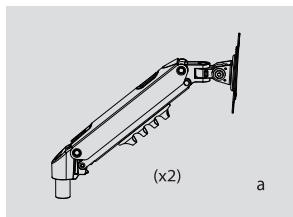

A	 M4x12 (x8)	 M4x30 (x8)	 12x5.8x16 (x8)
B	 S=4mm (x1)	 S=5mm (x1)	
C	 M6x12 (x3)		
D	 (x3)	 (x1)	
E	 Extra Screws (x2)		

1

Desk Clamp installation

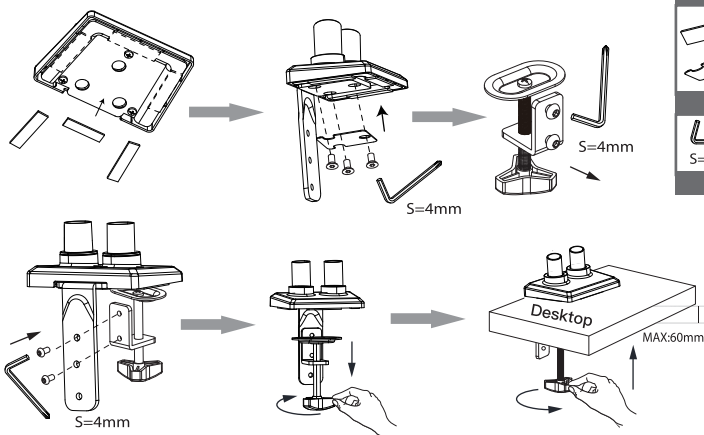

M6x12

C




D




B

OR Grommet installation


NOTE: If your desk has an existing grommet hole, Please install directly. If there is no existing grommet hole, make a mark on your mounting surface, and use a drill to drill a hole (40-60mm) in the mounting surface.

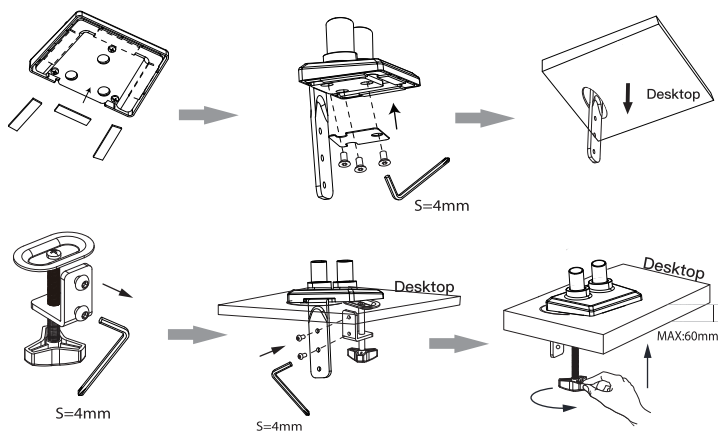

NOTE:Change the clamp default holes if desktop is between 60-100 mm.

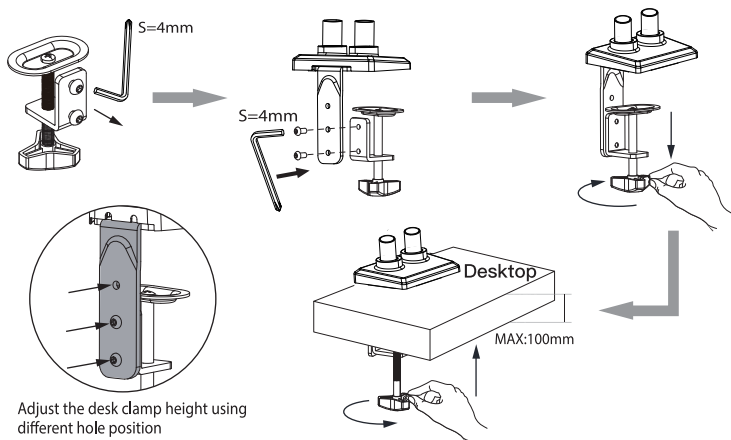

2

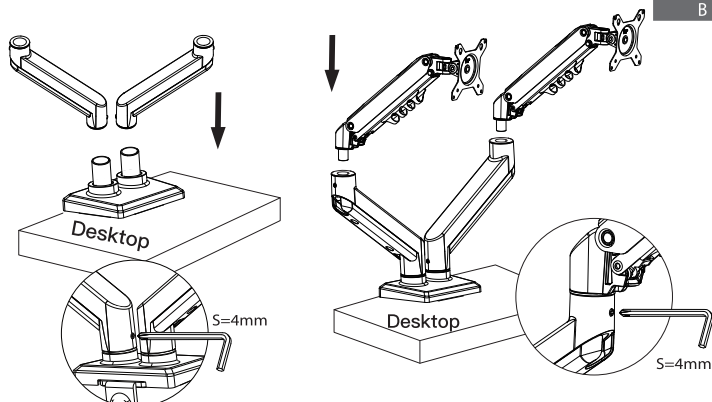

Install the lower arm to the base.
Insert the gas spring arm above the lower arm.

3

Flush surface installation: Install the upper two screws and don't screw them tight. Leave some space and hang the monitor on the head plate.



M4x12


A




S=4mm

B

①

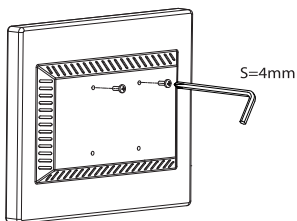


②

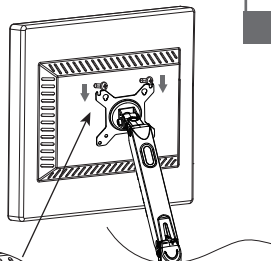


③

Install the lower two screws and fasten the upper two screws.

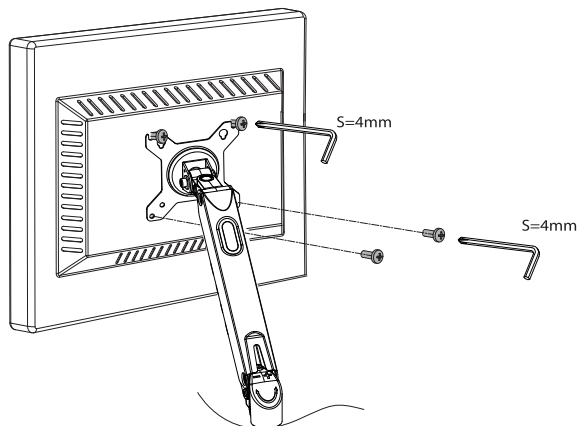


3.B

Recessed surface installation: Put spacers between headplate and monitor. Install the upper two screws and don't screw them tight. Leave some space and hang the monitor on the head plate.

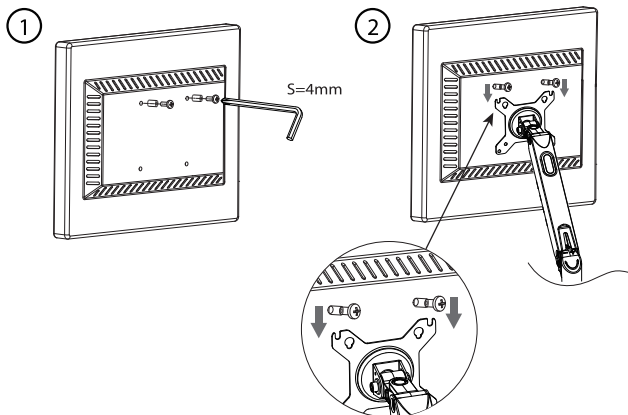

- ③ Put spacers between headplate and monitor. Install the lower two screws and fasten the upper two screws.

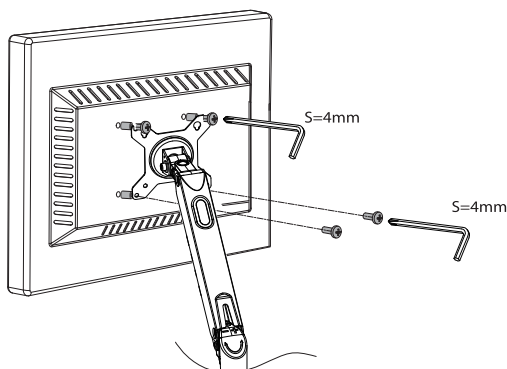

A





B

4




Be sure to keep the arm in horizontal position during adjustment. Or else, it would be difficult to adjust the mount.

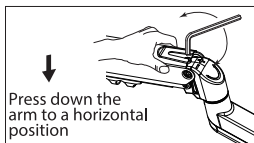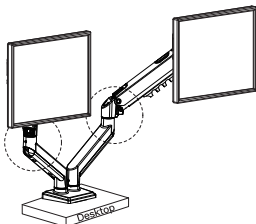

Press down the arm to a horizontal position

S=5mm


B

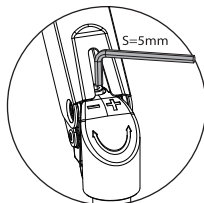


NOTE: Turn clockwise to reduce tension for lighter monitors and counter-clockwise to increase tension for heavier monitors.

Use a hex wrench to adjust the height tension of the gas spring arm, to keep different weight of monitors still at any position.

5

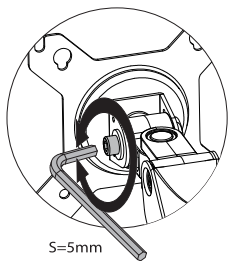

Use a hex wrench to adjust the damp for tilting. Turn counter-clockwise to reduce damping and clockwise to increase damping.

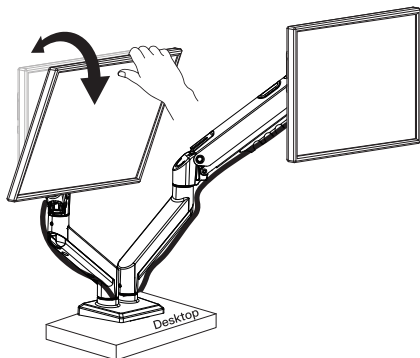

S=5mm

B

Insert cables into cable covers. Leave enough slack of cables at arm joints for full adjustment.